


型號 DSD180 CORDLESS DRYWALL SAW

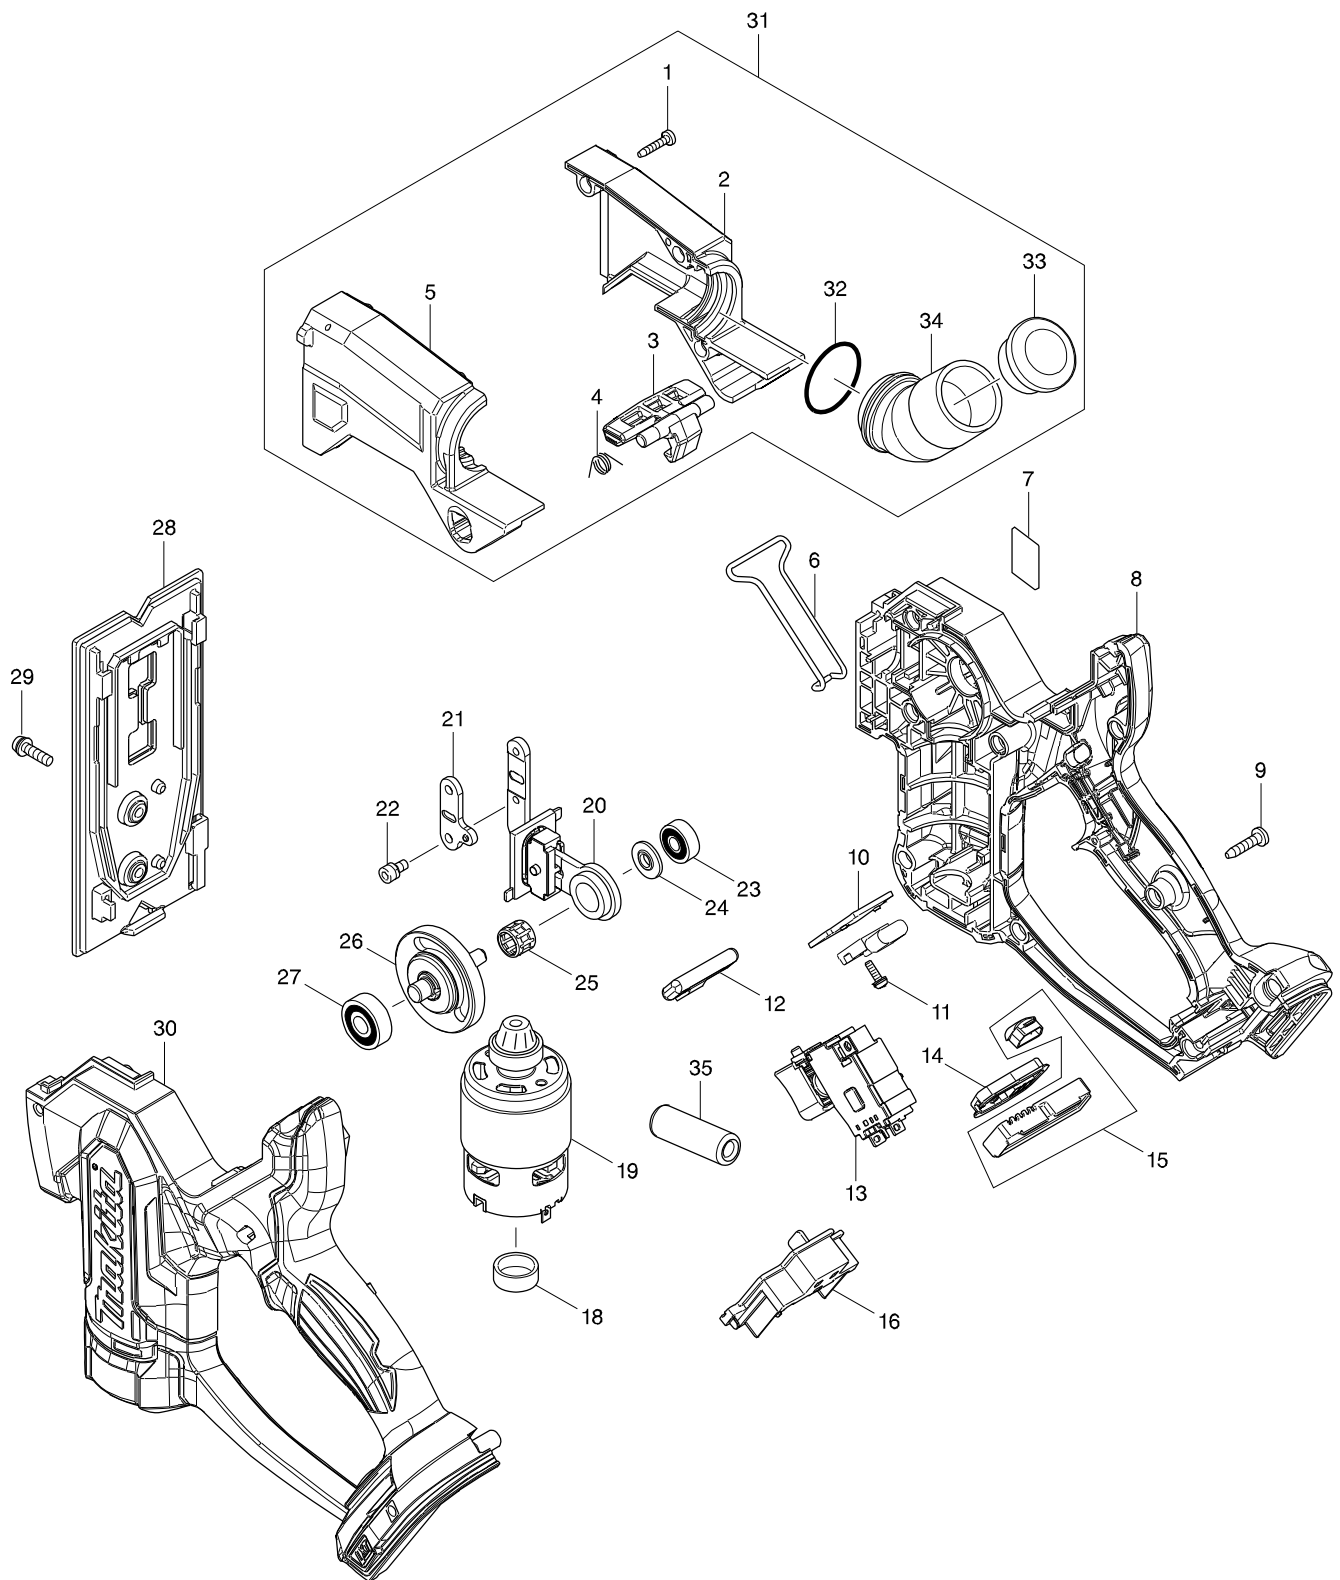

分解圖號	零件編號	品名	交換	數量	N/O	選擇1	選擇2	註記
001	266130-9	螺絲 PT3X6		3				
002	183C66-4	DUST COLLECTOR SET		1				
D10		INC. 5						
003	456628-6	HOOK		1				
004-1	231661-7	TORSION SPRING 9		1				
005	183C66-4	DUST COLLECTOR SET		1				
D10		INC. 2						
006	326680-7	安全導線		1				
007	852N21-0	DSD180 NAME PLATE		1				
008	183E41-2	外殼組		1				
C10	263002-9	橡皮銷 4		1				
C20	263005-3	橡皮銷 6		2				
D10		INC. 30						
009	266326-2	螺絲 M4X18		9				
010	689098-6	散熱片		1				
011	911013-5	盤頭螺絲 M3X10		1				
012	456625-2	閉鎖按鈕		1				
013	650762-6	開關		1				
014	140963-9	開關板組		1				
015	620509-2	燈電路		1				
016	644808-8	電池端子		1				
018	421940-3	尾部蓋		1				
019	629193-0	直流馬達		1				
020	143694-9	滑快組		1				
C10	256305-8	PIN 4		1				
C20	257391-2	RING 4		1				
C30	310686-5	SLIDER PLATE		1				
C40	310687-3	SLIDER GUIDE		1				
021	347010-9	刀架		1				
022	922106-3	HEX. SOCKET HEAD BOLT M4X8		2				
023	211012-0	軸承 606ZZ		1				
024	326679-2	側翼墊圈		1				
025	212077-5	針型培林		1				
026	143690-7	曲軸組		1				
027	211032-4	培林 608ZZ		1				
028	456623-6	底座		1				
029	911128-8	平頭螺絲 4X16		2				
030	183E41-2	外殼組		1				
C10	263002-9	橡皮銷 4		1				
C20	263005-3	橡皮銷 6		2				
D10		INC. 8						
031	123559-1	集塵器		1				
D10		INC. 1-3,4-1,5,32-34						
032	213412-0	O圈 29 F/5008B		1				
033	286268-4	蓋子31 F/4112		1				
034	451177-8	DUST NOZZLE		1				
A01	456624-4	BASE COVER		1				
A02	456632-5	BLADE COVER		1				

