
INSTRUCTION MANUAL



Router

3601B

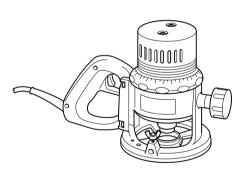

005038



∆WARNING:

For your personal safety, READ and UNDERSTAND before using. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ENGLISH

SPECIFICATIONS

Model	3601B		
Collet chuck capacity	12 mm or 1/2"		
No load speed (min ⁻¹)	23,000		
Overall height	190 mm		
Net weight	3.6 kg		
Safety class	□ /II		

- · Due to our continuing programme of research and development, the specifications herein are subject to change without notice.
- · Specifications may differ from country to country.
- · Weight according to EPTA-Procedure 01/2003

END201-5

Symbols

The following show the symbols used for the equipment. Be sure that you understand their meaning before use.



· Read instruction manual.



· DOUBLE INSULATION



· Only for EU countries

Do not dispose of electric equipment together with household waste material! In observance of European Directive 2002/96/EC on waste electric and electronic equipment and its implementation in accordance with national law, electric equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

ENE010-1

Intended use

The tool is intended for flush trimming and profiling of wood, plastic and similar materials.

ENF002-1

Power supply

The tool should be connected only to a power supply of the same voltage as indicated on the nameplate, and can only be operated on single-phase AC supply. They are double-insulated in accordance with European Standard and can, therefore, also be used from sockets without earth wire.

GEA005-3

General Power Tool Safety Warnings

MARNING Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces

- the risk of electric shock.
- Use of power supply via a RCD with a rated residual current of 30mA or less is always recommended.

Personal safety

- 11. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- 13. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- 16. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- 17. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards

Power tool use and care

- 18. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- 20. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

- 21. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- 22. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- 24. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

Service

- 25. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- 26. Follow instruction for lubricating and changing accessories.
- Keep handles dry, clean and free from oil and grease.

GEB018-2

ROUTER SAFETY WARNINGS

- Hold power tools by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.
- Use clamps or another practical way to secure and support the workpiece to a stable platform. Holding the work by hand or against your body leaves it unstable and may lead to loss of control.
- Wear hearing protection during extended period of operation.
- 4. Handle the bits very carefully.
- Check the bit carefully for cracks or damage before operation. Replace cracked or damaged bit immediately.
- Avoid cutting nails. Inspect for and remove all nails from the workpiece before operation.
- 7. Hold the tool firmly with both hands.
- 8. Keep hands away from rotating parts.
- Make sure the bit is not contacting the workpiece before the switch is turned on.

- Before using the tool on an actual workpiece, let it run for a while. Watch for vibration or wobbling that could indicate improperly installed bit.
- 11. Be careful of the bit rotating direction and the feed direction
- Do not leave the tool running. Operate the tool only when hand-held.
- Always switch off and wait for the bit to come to a complete stop before removing the tool from workpiece.
- Do not touch the bit immediately after operation; it may be extremely hot and could burn your skin.
- 15. Do not smear the tool base carelessly with thinner, gasoline, oil or the like. They may cause cracks in the tool base.
- Draw attention to the need to use cutters of the correct shank diameter and which are suitable for the speed of the tool.
- Some material contains chemicals which may be toxic. Take caution to prevent dust inhalation and skin contact. Follow material supplier safety data.
- Always use the correct dust mask/respirator for the material and application you are working with.

SAVE THESE INSTRUCTIONS.

∴WARNING:


DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to safety rules for the subject product. MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.

FUNCTIONAL DESCRIPTION

∆CAUTION:

 Always be sure that the tool is switched off and unplugged before adjusting or checking function on the tool.

Adjusting the depth of cut



Scale ring
 Knob

Place the tool on a flat surface. Turn the scale ring until it makes contact with the base. Loosen the knob. Turn the scale ring until the bit just touches the flat surface. Tighten the knob. Place the tool on its side and turn the scale ring counterclockwise (when viewing the tool from the top) until the desired depth of cut is obtained. One full turn of the scale ring is equal to 5 mm change in depth setting. Loosen the knob and move the tool base until it makes contact with the scale ring. Then tighten the knob securely.

∆CAUTION:

 Since excessive cutting may cause overload of the motor or difficulty in controlling the tool, the depth of cut should not be more than 15 mm at a pass when cutting grooves. When you wish to cut grooves more than 15 mm deep, make several passes with progressively deeper bit settings.

Switch action



Lock button
 Switch trigger

∆CAUTION:

 Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.

For tool with lock button


To start the tool, simply pull the switch trigger. Release the switch trigger to stop.

For continuous operation, pull the switch trigger and then push in the lock button.

To stop the tool from the locked position, pull the switch trigger fully, then release it.

For tool without lock button

To start the tool, simply pull the switch trigger. Release the switch trigger to stop.




1. Switch trigger

00504

For tool with lock-off button

To prevent the switch trigger from being accidentally pulled, a lock-off button is provided.

To start the tool, depress the lock-off button and pull the switch trigger. Release the switch trigger to stop.



Lock-off button
 Switch trigger

ASSEMBLY

∆CAUTION:

 Always be sure that the tool is switched off and unplugged before carrying out any work on the tool.

Installing or removing the bit



005042

∆CAUTION:

- Install the bit securely. Always use only the wrenches provided with the tool. A loose or overtightened bit can be dangerous.
- Do not tighten the collet chuck without inserting a bit or install smaller shank bits without using a collet sleeve. Either can lead to breakage of the collet chuck.


Insert the bit all the way into the collet chuck and withdraw it very slightly (approx. 2 mm). Then tighten the collet chuck securely with the two wrenches. When using smaller shank bits, first insert the appropriate collet sleeve into the collet chuck, then install the bit as mentioned above.

To remove the bit, follow the installation procedure in reverse.

OPERATION

Set the tool base on the workpiece to be cut without the bit making any contact. Then turn the tool on and wait until the bit attains full speed. Move the tool forward over the workpiece surface, keeping the tool base flush and advancing smoothly until the cutting is complete.

When doing edge cutting, the workpiece surface should be on the left side of the bit in the feed direction.




- 1. Workpiece
- 2. Bit revolving direction
- 3. View from the top of the tool
- 4. Feed direction

001984


NOTF:

- Moving the tool forward too fast may cause a poor quality of cut, or damage to the bit or motor. Moving the tool forward too slowly may burn and mar the cut. The proper feed rate will depend on the bit size, the kind of workpiece and depth of cut. Before beginning the cut on the actual workpiece, it is advisable to make a sample cut on a piece of scrap lumber. This will show exactly how the cut will look as well as enable you to check dimensions.
 - When using the straight guide or the trimmer guide, be sure to install it on the right side in the feed direction. This will help to keep it flush with the side of the workpiece.



- Feed direction
 Bit revolving
- 2. Bit revolving direction
- Workpiece
- 4. Straight guide


Straight guide



005043

The straight guide is effectively used for straight cuts when chamfering or grooving.

To install the straight guide, insert the guide bar into the holes in the tool base until the notch in the guide bar reaches just under the wing bolt (B). Then tighten wing bolt (B). Loosen the wing bolt (A) and adjust the distance between the bit and the straight guide. At the desired distance, tighten the wing bolt (A) to secure the straight guide in place.



- 1. Wing bolt (B)
- 2. Wing bolt (A)
- 3. Straight guide
- Straight guid
 Guide bar


When cutting, move the tool with the straight guide flush with the side of the workpiece.

Templet guide (Accessory)



The templet guide provides a sleeve through which the


bit passes, allowing use of the tool with templet patterns. To install the templet guide, screw the templet guide on the base plate.



005046

- 1. Base plate
- 2. Templet guide

Secure the templet to the workpiece. Place the tool on the templet and move the tool with the templet guide sliding along the side of the templet.




- 1. Bit
- 2. Base
- Templet
 Workpiece
- 5. Distance (X)
- 6. Outside diameter of the templet guide
- 7. Templet guide

NOTE:

 The workpiece will be cut a slightly different size from the templet. Allow for the distance (X) between the bit and the outside of the templet guide. The distance (X) can be calculated by using the following equation:

Distance (X) = (outside diameter of the templet guide - bit diameter) / 2

Trimmer guide (Accessory)




005047


Trimming, curved cuts in veneers for furniture and the like can be done easily with the trimmer guide. The guide roller rides the curve and assures a fine cut.

Install the trimmer guide on the tool base with the wing bolts (B). Loosen the wing bolt (A) and adjust the distance between the bit and the trimmer guide by turning the fine adjusting screw (1.5 mm per turn). At the desired distance, tighten the wing bolt (A) to secure the trimmer guide in place. When adjusting the guide roller up or down, loosen the wing bolt (C). After adjusting it,

tighten the wing bolt (C) securely.




- 1. Wing bolt (B)
- 2. Fine adjusting screw
- 3. Wing bolt (A)
- 4. Trimmer quide
- 5. Wing bolt (C)
- 6. Guide roller




- 1. Hose 2. Joint
- 3. Vacuum hose
- 4. Outer diameter **ω32** mm
- 5. Inner diameter **ω38** mm

When cutting, move the tool with the guide roller riding the side of the workpiece.




- 1. Bit
- 2. Guide roller
- 3. Workpiece

Connecting a vacuum cleaner



- 1. Vacuum hose
- 2 Vacuum cleaner



- 1. Screwdriver
- 2 Screw
- 3. Hole
- 4. Vacuum hose
- 5 Router base


Connect another and of the hose to the vacuum cleaner hose of 38 mm in inner diameter using a joint.

MAINTENANCE

∆CAUTION:

- Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.
- Never use gasoline, benzine, thinner, alcohol or the like. Discoloration, deformation or cracks may result.


Replacing carbon brushes



1. Limit mark

Remove and check the carbon brushes regularly. Replace when they wear down to the limit mark. Keep the carbon brushes clean and free to slip in the holders. Both carbon brushes should be replaced at the same time. Use only identical carbon brushes.

Use a screwdriver to remove the rear cover.




- 1 Screwdriver
- 2. Rear cover

Connect a vacuum hose to the tool and further connect another end of it to the vacuum cleaner. Secure the hose to the router base with a screw in the figure.

005049

Use a screwdriver to remove the brush holder caps. Take out the worn carbon brushes, insert the new ones and secure the brush holder caps.

Then install the rear cover with the screws.



Brush holder cap
 Screwdriver

005050

ACAUTION:

 Do not turn the tool on without the rear cover installed in place.

To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Makita Authorized Service Centers, always using Makita replacement parts.

ACCESSORIES


∆CAUTION:

 These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Makita Service Center.

- · Straight & groove forming bits
- · Edge forming bits
- · Laminate trimming bits
- Straight guide assembly
- Trimmer guide assembly
- Templet guide 25
- Templet guides
- Templet guide adapter
- Lock nut
- Collet cone 12 mm. 1/2"
- Collet sleeve 3/8". 1/4"
- Collet sleeve 6 mm, 8 mm, 10 mm
- · Wrench 21
- Wrench 23

Router bits Straight bit




005116

			mm
D	Α	L1	L2
6	20	50	15
1/4"	20		10
12	12	60	30
1/2"	12	00	30
12	40	00	05
1/2"	10	60	25
8	8	60	25
6		F0	40
1/4"	8	50	18
6	6	50	18
1/4"	0	50	18

006452

"U"Grooving bit




005117

				mm
D	Α	L 1	L2	R
6	6	50	18	3

006453

"V"Grooving bit




005118

				mm
D	Α	L1	L 2	θ
1/4"	20	50	15	90°

006454


Drill point flush trimming bit



005120

				mm
D	Α	L1	L 2	L 3
12	12	60	20	35
8	8	60	20	35
6	6	60	18	28
006456		•		

Drill point double flush trimming bit




003121

					mm
D	Α	L 1	L2	L 3	L 4
6	6	70	40	12	14

006457


Board-jointing bit



005123

					mm
D	A 1	A 2	L1	L 2	L 3
12	38	27	61	4	20


Corner rounding bit



005125

	_					mm
D	A 1	A 2	L1	L 2	L 3	R
6	25	9	48	13	5	8
6	20	8	45	10	4	4
006460						


Chamfering bit



					mm
D	Α	L 1	L 2	L 3	θ
6	23	46	11	6	30°
6	20	50	13	5	45°
6	20	49	14	2	60°

006462


Cove beading bit



005129

				mm
D	Α	L 1	L2	R
6	20	43	8	4
6	25	48	13	8
006464				

Ball bearing flush trimming bit



005130

			mm	
D	Α	L 1	L 2	
6	10	50	20	
1/4"	10	50		


Ball bearing corner rounding bit



						mm
D	A 1	A 2	L1	L 2	L 3	R
6	15	8	37	7	3.5	3
6	21	8	40	10	3.5	6
1/4"	21	8	40	10	3.5	6

006466


Ball bearing chamfering bit



005132

					mm
D	A 1	A 2	L 1	L 2	θ
6	26	8	42	12	45°
1/4"	20				
6	20	8	41	11	60°

Ball bearing beading bit




00513

							mm
D	A 1	A 2	A 3	L1	L 2	L3	R
6	20	12	8	40	10	5.5	4
6	26	12	8	42	12	4.5	7

006468


Ball bearing cove beading bit



								mm
D	A 1	A 2	A 3	A 4	L1	L 2	L 3	R
6	20	18	12	8	40	10	5.5	3
6	26	22	12	8	42	12	5	5

006469

Ball bearing roman ogee bit



							mm
D	A 1	A 2	L1	L2	L3	R1	R2
6	20	8	40	10	4.5	2.5	4.5
6	26	8	42	12	4.5	3	6

Makita Corporation